



Read this document carefully before using this device. The guarantee will be expired by damaging of the device if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ENDA EPA241 PROGRAMMABLE AC/DC AMMETER

Thank you for choosing ENDA EPA241 programmable AC/DC ammeter.

- * 35 x 77mm sized.
- * 4 digits display.
- * Easy to use by front panel keypad.
- * Can be used with current transformer or shunt.
- * Programmable scale between 5A and 9999A.
- * Multifunctional alarm output (NO+NC) for upper and lower limits.
- * CE marked according to European Norms.
- * Measuring type can be selected AC, DC or True RMS



Order Code: EPA241- --

1 - Input Type

S.....Internal Shunt Resistor
None...External Shunt Resistor

2 - Output

R.....Relay
None...No Relay

3 - Supply Voltage

230VAC...230V AC
24VAC.....24V AC
SM.....9-30V DC / 7-24V AC

4 - ModBus

RS...ModBus (optional)
Ammeter with current transformer used to provide isolation of the ModBus communication.

Technical Specifications

| ENVIRONMENTAL CONDITIONS | |
|--|--|
| Ambient/stroge temperature | 0 ... +50°C/-25 ... 70°C |
| Max. Relative humidity | 80% up to 31°C decreasing linearly 50% at 40°C. |
| Rated pollution degree | According to EN 60529 Front panel : IP65 , Rear panel : IP20 |
| Height | Max. 2000m |
| Do not use the device in locations subject to corrosive and flammable gases. | |

| ELECTRICAL CHARACTERISTICS | |
|----------------------------|--|
| Supply | 230V AC +10% -20%, 50/60Hz or 24V AC ±10% , 50/60Hz or optional 9-30V DC / 7-24V AC ±10% SMPS |
| Power consumption | Max. 5VA |
| Wiring | 1.5mm ² screw-terminal connections |
| Scale | AC and RMS 0A...9999A (Specified c.tr.r parameter. For example:scale is 0A...5A for c.tr.r=5.00) DC -999A...9999A (Specified c.tr.r parameter. For example:scale is -5A...5A for c.tr.r=5.00) |
| Sensitivity | 0.002A x c.tr.r (For example , 0.01A for c.tr.r=5.00) |
| Accuracy | AC ± 1% (full scale) (± 2% For square wave form) DC ± 1% (full scale) RMS ± 1% (full scale) (± 2% For square wave form) |
| Input Range | EPA241Sxx -5A...5A (Device breaks down at more than 10A peak and more current.) EPA241xx -60mV...60mV (Device breaks down at more than 50V peak and more voltage.) |
| Input impedance | EPA241Sxx 12mΩ EPA241xx 40kΩ |
| Frequency Range | DC , 10Hz - 200Hz (For square wave form 10Hz-70Hz) |
| EMC | EN 61326-1: 1997, A1: 1998, A2: 2001 (Performance criterion B for the EMC standard) |
| Safety requirements | EN 61010-1: 2001 (Pollution degree 2, overvoltage category II) |


| OUTPUTS | |
|---------------------------|---|
| Alarm output | Relay: 250V AC, 8A (for resistive load), NO+NC |
| Life expectancy for relay | Mechanical 30.000.000 ; Electrical 100.000 operation. |

| HOUSING | |
|--------------------|---|
| Housing type | Suitable for flush-panel mounting. |
| Dimensions | W77xH35xD71mm |
| Weight | EPA241 Approx. 250g (after packing) EPA241-24 Approx. 250g (after packing) |
| Enclosure material | Self extinguishing plastics. |




While cleaning the device, solvents (thinner, benzine, acid etc.) or corrosive materials must not be used.

Dimensions

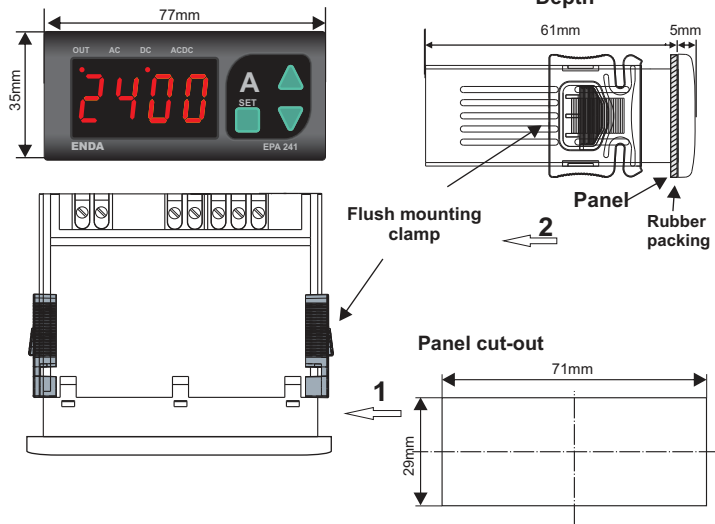


To remove the device from panel:
 - While pushing the the flush-mounting clamp in direction 1, pull out it in direction 2.

- Note :**
- 1) Panel thickness should be maximum 7mm.
 - 2) If there is no 60mm free space at the back side of the device, it would be difficult to remove it from the panel.

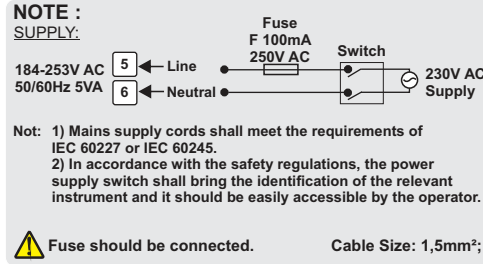


- Equipment is protected throughout by DOUBLE INSULATION
- Holding screw 0.4-0.5Nm.

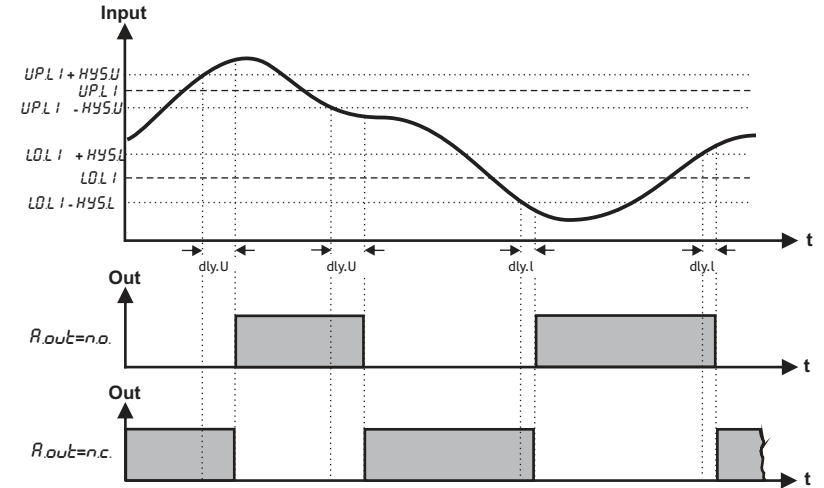

Connection Diagram



ENDA EPA241 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling. Make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.

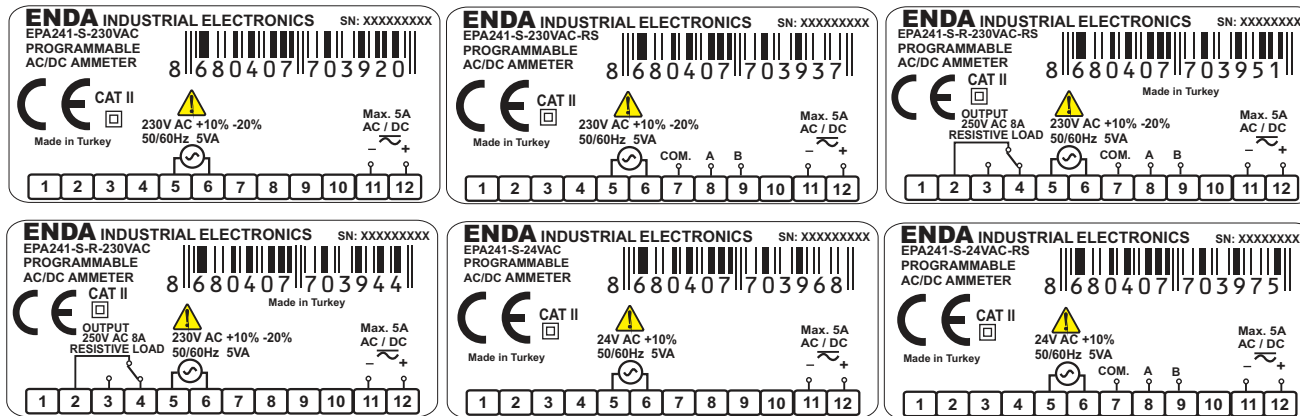


| | ac | dc | Ac.dc (rms) |
|--|--|-------------------|------------------------|
| | $A \frac{1}{\sqrt{2}}$ | 0.000 | $A \frac{1}{\sqrt{2}}$ |
| | 0.308 A | $A \frac{2}{\pi}$ | $A \frac{1}{\sqrt{2}}$ |
| | 0.386 A | $A \frac{1}{\pi}$ | $A \frac{1}{2}$ |
| | A | 0.000 | A |
| | $A \frac{1}{2}$ | $A \frac{1}{2}$ | $A \frac{1}{\sqrt{2}}$ |
| | $A \sqrt{\frac{d}{T} - \frac{d^2}{T^2}}$ | $A \frac{d}{T}$ | $A \sqrt{\frac{d}{T}}$ |
| | $A \frac{1}{\sqrt{3}}$ | 0.000 | $A \frac{1}{\sqrt{3}}$ |

EPA241 PROGRAMMING DIAGRAM




- Increment key** Used for increasing the setpoint value and changing parameters. When held down for a few seconds, configured numeric value increases faster.
- Decrement key** Used for decreasing the setpoint value and changing parameter. When held down for a few seconds, configured numeric value decreases faster.
- Programming key** Used for displaying and configuring the selected parameter value.


ADJUSTING THE ALARM VALUE

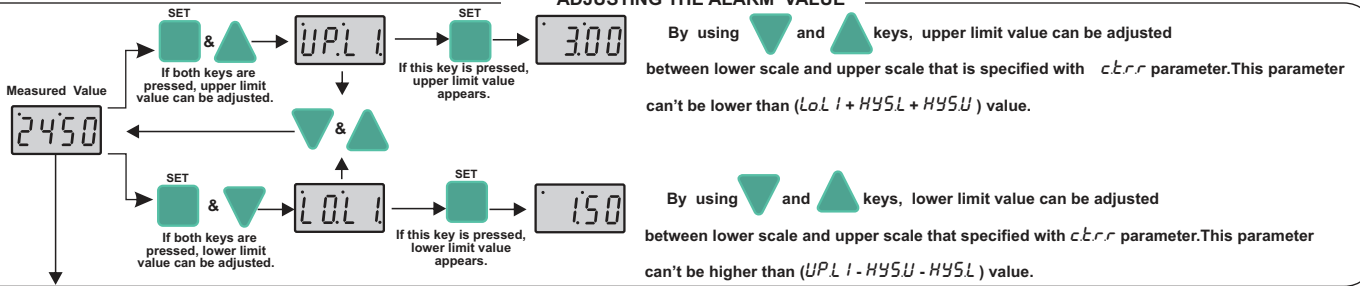


If both & keys are pressed and held for 3 seconds, programming mode is entered. If & keys are pressed while parameter names are displayed, then it returns to measured value mode.

PROGRAMMING MODE

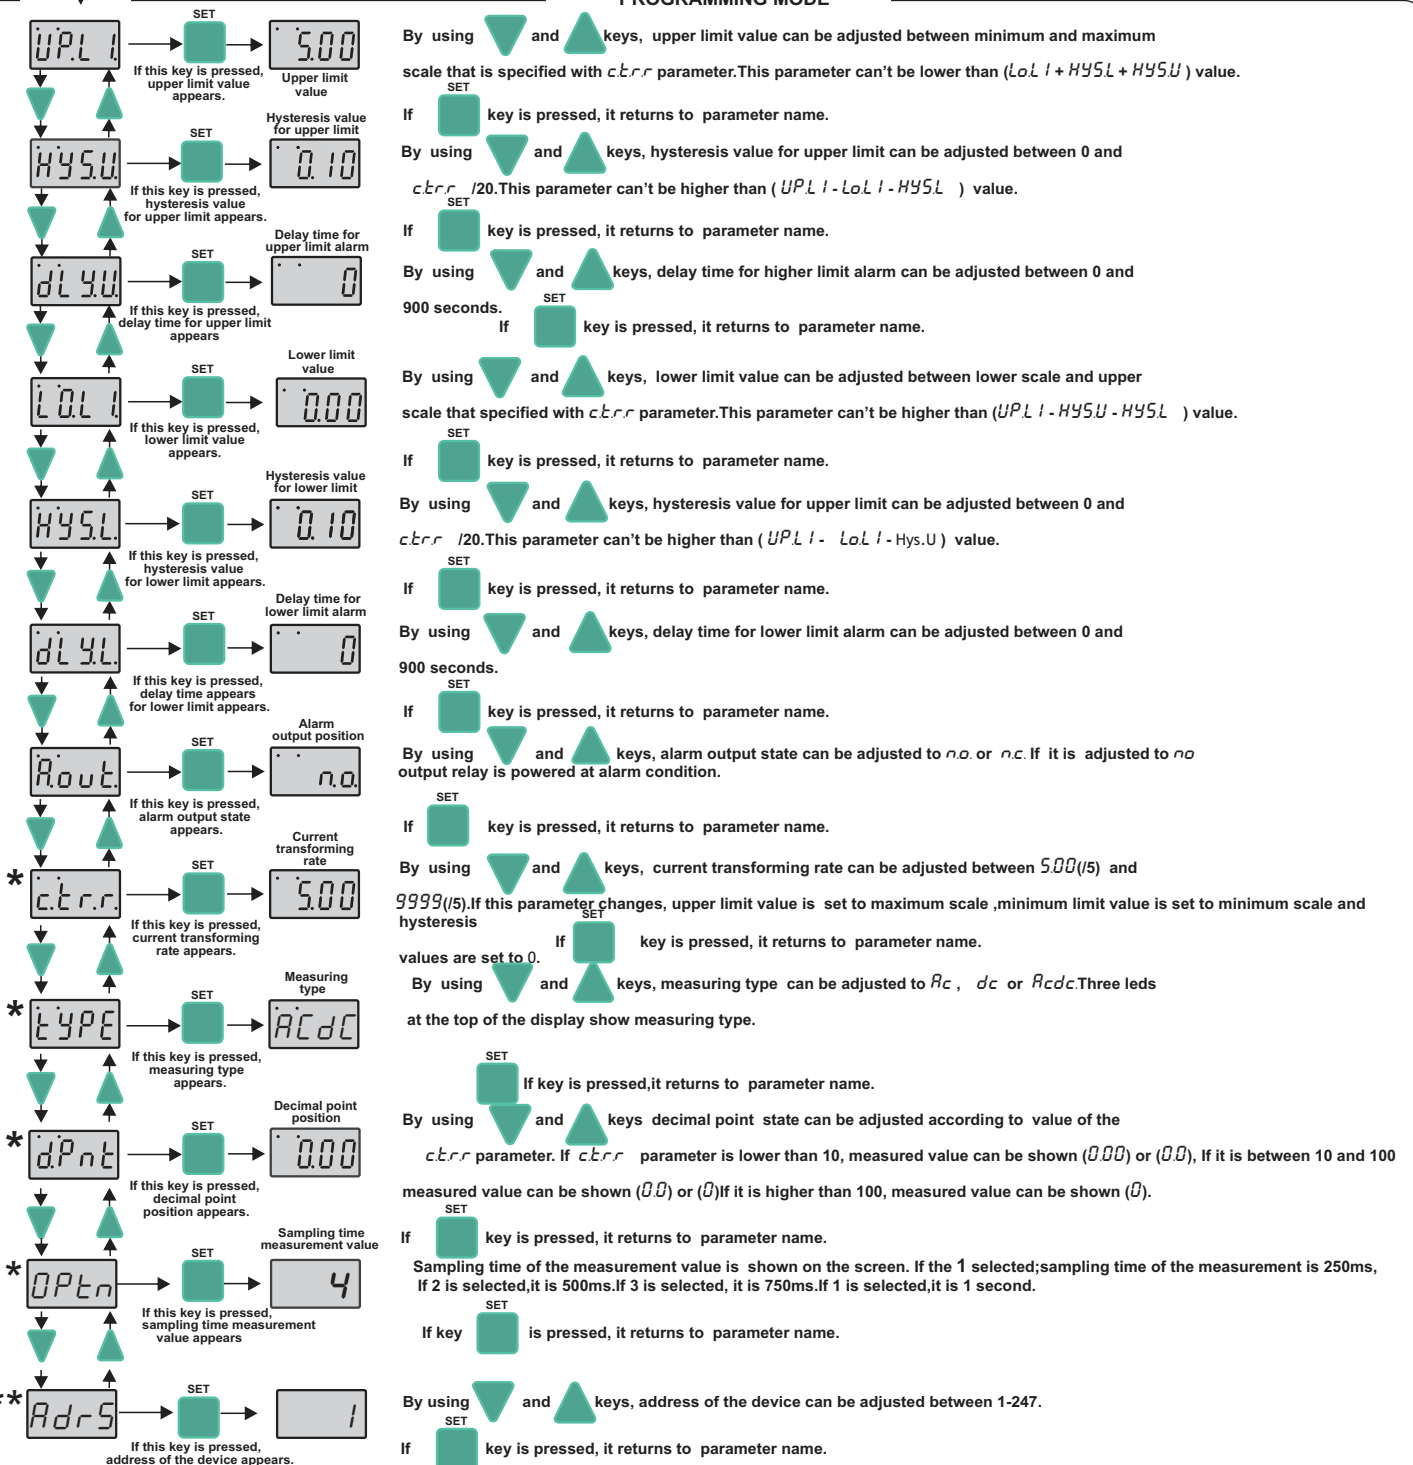



By using  and  keys, baudrate value of the device can be adjusted to OFF,1200,2400,4800,9600,19200.

If  key is pressed, it returns to parameter name.

(*) There are only *ctrr*, *type*, *dPnt* and *oPln* parameters in the devices those have no relay.

(**) The *Adr5* and *bAud* parameters are only in the devices those have modbus.

If any key is pressed in 25 seconds or the device is powered down and powered up, then it returns to operation mode.

NOTE: If  key is held down while the device is powered up, the *dPRr* message will appear and the factory settings will be restored.

ERROR MESSAGES



Means, measured current value is higher than maximum scale.



Means, measured current value is lower than minimum scale.

ENDA EPA241 DIGITAL AMPERMETER MODBUS PROTOCOL ADDRESS MAP

1.1 HOLDING REGISTERS

| Holding Register Addresses | | Data Type | Data Content | Parameter Name | Read/Write Permission | Status Value |
|----------------------------|--------|-----------|--|----------------|-----------------------|--------------|
| Decimal | Hex | | | | | |
| 0000d | 0x0000 | word | The upper limit of the setpoint | <i>uPLl</i> | Readable/Writable | 5.0 |
| 0001d | 0x0001 | word | The upper limit of the hysteresis value | <i>HYSU</i> | Readable/Writable | 0.10 |
| 0002d | 0x0002 | word | Delay time for the upper limit alarm | <i>dLYU</i> | Readable/Writable | 0 |
| 0003d | 0x0003 | word | The lower limit of the setpoint | <i>LoLl</i> | Readable/Writable | 0 |
| 0004d | 0x0004 | word | The lower limit of the hysteresis value | <i>HYSL</i> | Readable/Writable | 0.10 |
| 0005d | 0x0005 | word | Delay time for the lower limit alarm | <i>dLYL</i> | Readable/Writable | 0 |
| 0006d | 0x0006 | word | Current replacement rate | <i>ctrr</i> | Readable/Writable | 5 |
| 0007d | 0x0007 | word | Measurement method (0=AC, 1=DC, 2=ACDC) | <i>TYPE</i> | Readable/Writable | ACDC |
| 0008d | 0x0008 | word | Decimal point. (0=X.XX, 1=X.X, 2=X) | <i>dPnt</i> | Readable/Writable | X.XX |
| 0009d | 0x0009 | word | Sampling time of the measurement value. If 1 is selected, it is 250ms. If 2 is selected, it is 500ms. If 3 is selected, it is 750ms. If 4 is selected, it is 1 second. | <i>oPln</i> | Readable/Writable | 4 |
| 0010d | 0x000A | word | Device address for RS485 network connection. Adjustable between 1-247. | <i>Adr5</i> | Readable/Writable | 1 |
| 0011d | 0x000B | word | Baudrate (0=Off; 1=1200; 2=2400; 3=4800; 4=9600; 5=19200) | <i>bAud</i> | Readable/Writable | OFF |

*Holding Register Parameter Table (No Relay Models)

| | | | | | | |
|-------|--------|------|--|-------------|-------------------|------|
| 0000d | 0x0000 | word | Current replacement rate | <i>ctrr</i> | Readable/Writable | 5 |
| 0001d | 0x0001 | word | Measurement method (0=AC, 1=DC, 2=ACDC) | <i>TYPE</i> | Readable/Writable | ACDC |
| 0002d | 0x0002 | word | Decimal point. (0=X.XX, 1=X.X, 2=X) | <i>dPnt</i> | Readable/Writable | X.XX |
| 0003d | 0x0003 | word | Sampling time of the measurement value | <i>oPln</i> | Readable/Writable | 4 |
| 0004d | 0x0004 | word | Device address for RS485 network connection. Adjustable between 1-247. | <i>Adr5</i> | Readable/Writable | 1 |
| 0005d | 0x0005 | word | Baudrate (0=Off; 1=1200; 2=2400; 3=4800; 4=9600; 5=19200) | <i>bAud</i> | Readable/Writable | 9600 |

1.2 INPUT REGISTERS

| Input Register Addresses | | Data Type | Data Content | Parameter Name | Read/Write Permission |
|--------------------------|--------|-----------|------------------------|----------------|-----------------------|
| Decimal | Hex | | | | |
| 0000d | 0x0000 | word | Measured current value | -- | Only Readable |

1.3 DISCRETE INPUTS

| Discrete Input Addresses | | Data Type | Data Content | Parameter Name | Read/Write Permission |
|--------------------------|------|-----------|----------------------------------|----------------|-----------------------|
| Decimal | Hex | | | | |
| 00d | 0x00 | Bit | Relay output state (0=OFF; 1=ON) | -- | Only Readable |

1.4 COILS

| Coil Addresses | | Data Type | Data Content | Parameter Name | Read/Write Permission | Status Value |
|----------------|------|-----------|---------------------------------|----------------|-----------------------|--------------|
| Decimal | Hex | | | | | |
| 00d | 0x00 | Bit | Alarm output state (0=no; 1=nc) | <i>RoUt</i> | Readable/Writable | |

*Coil and Discrete input parameters are not available in the devices those have no relay