



Read this document carefully before using this device. The guarantee will be expired by device damages if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ENDA EPV241 AC/DC VOLTMETER

Thank you for choosing ENDA EPV241 AC/DC voltmeter.



- * 77 x 35mm sized.
- * 3 digits display.
- * Values between -100V and 100 V can be indicated with one decimal point.
- * Easy to configure with front panel keypad.
- * Multifunctional alarm output (NO+NC) for upper and lower limits.
- * CE marked according to European Norms.
- * Measuring type can be selected AC, DC or True RMS.



Order Code : EPV241- - -

1-Input	2-Output	3-Supply Voltage	4-ModBus
L.....-50V..+50V	R.....Relay	230VAC...230V AC	RS..... ModBus (optional)
None....-500V...+500V	None...No relay	24VAC.....24V AC	
		SM.....9-30V DC / 7-24V AC	

Technical Specifications

ENVIRONMENTAL CONDITIONS	
Ambient/stroge temperature	0 ... +50°C/-25 ... 70°C
Max. Relative humidity	Relative humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.
Rated pollution degree	According to EN 60529 Front panel : IP65 , Rear panel : IP20
Height	Max. 2000m
Do not use the device in locations subject to corrosive and flammable gases.	

ELECTRICAL CHARACTERISTICS	
Supply	230V AC +10% -20%, 50/60Hz or 24V AC ±10% , 50/60Hz or optional 9-30V DC / 7-24V AC ±10% SMPS
Power consumption	Max. 5VA
Wiring	2.5mm ² screw-terminal connections
Scale	AC and RMS 0V...500V or For EPV241-L devices 0.00V...50.00V DC -500V...500V -50.0V...50.00V
Sensitivity	0,01V (For input voltages between -10V and 50V in EPV241-L devices.) 0,1V (For input voltages between -100V and 100V in EPV241 devices and for input voltages lower than -10V in EPV241-L devices.) 1V (For input voltages lower than -100V or higher than 100V.)
Accuracy	AC ±1% (Full scale) (For square wave form ± 2%) DC ±1% (Full scale) RMS ±1% (Full scale) (For square wave form ± 2%)
Input Range	-500V...500V (Device breaks down at more than ±1250V DC voltages.) -50V....50V (For EPV241-L)
Input Impedance	870kΩ
Frequency Range	DC , 10Hz - 200Hz (For square wave form 10Hz-70Hz)
EMC	EN 61326-1: 2006
Safety requirements	EN 61010-1: 2010 (Pollution degree 2, overvoltage category II)


OUTPUTS	
Alarm output	Relay: 250V AC, 8A (for resistive load), NO+NC
Life expectancy for relay	Mechanical 30.000.000 ; Electrical 100.000 operation.

HOUSING	
Housing type	Suitable for flush-panel mounting. (According to DIN 43 700)
Dimensions	W77xH35xD71mm
Weight	EPV241 Approx. 350g (after packing) EPV241-24 Approx. 350g (after packing)
Enclosure material	Self extinguishing plastics.




While cleaning the device, solvents (thinner, benzine, acid etc.) or corrosive materials must not be used.

Dimensions

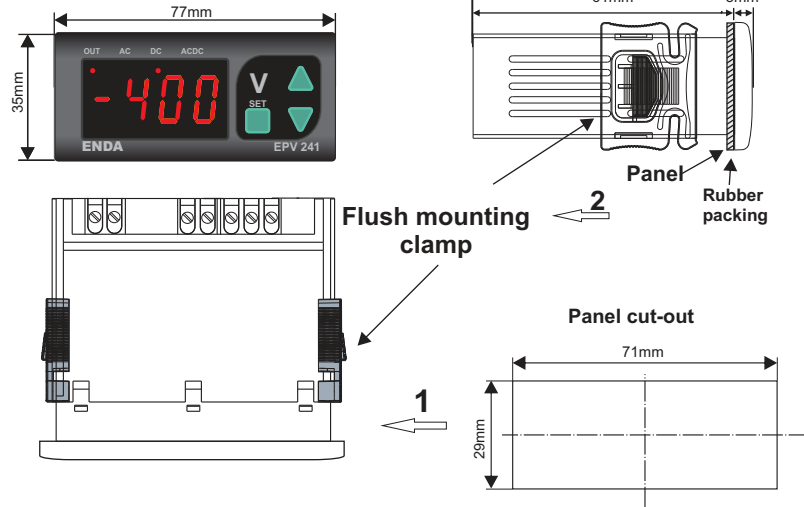


To remove the device from panel:
 - While pushing the the flush-mounting clamp in direction 1, pull out it in direction 2.

- Note :**
- 1) Panel thickness should be maximum 7mm.
 - 2) If there is no 60mm free space at the back side of the device, it would be difficult to remove it from the panel.

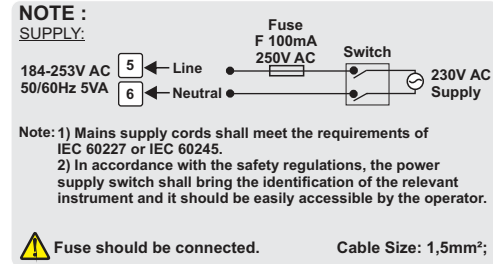





- Equipment is protected throughout by **DOUBLE INSULATION**
- Holding screw 0.4-0.5Nm.

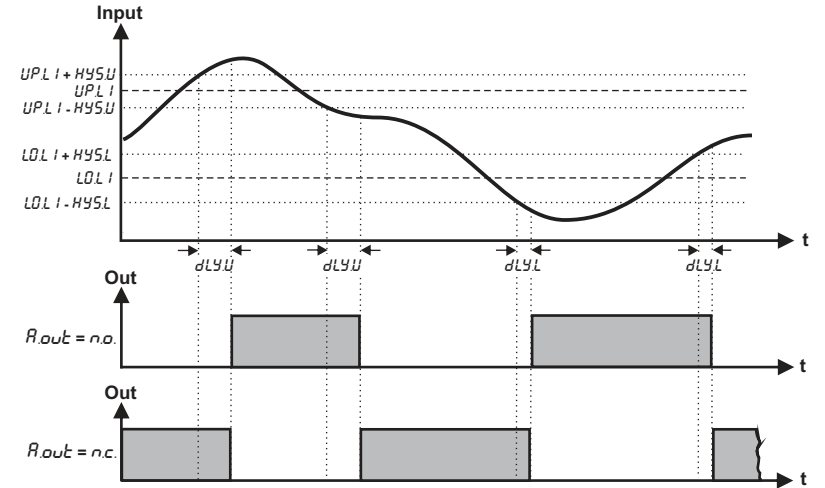

Connection Diagram



ENDA EPV241 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling. Make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.

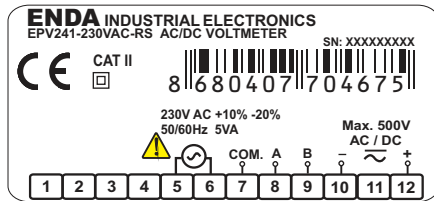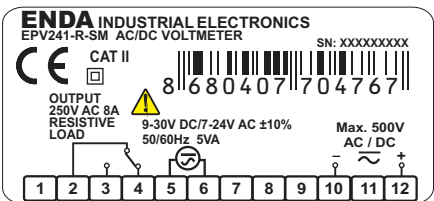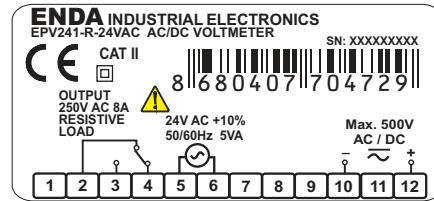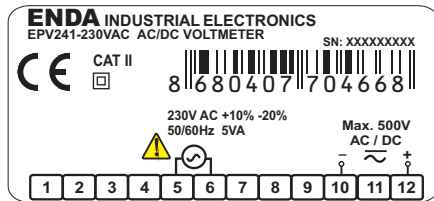


	R_c	d_c	R_{cdc} (rms)
	$A \frac{1}{\sqrt{2}}$	0.000	$A \frac{1}{\sqrt{2}}$
	0.308 A	$A \frac{2}{\pi}$	$A \frac{1}{\sqrt{2}}$
	0.386 A	$A \frac{1}{\pi}$	$A \frac{1}{2}$
	A	0.000	A
	$A \frac{1}{2}$	$A \frac{1}{2}$	$A \frac{1}{\sqrt{2}}$
	$A \sqrt{\frac{d}{T} - \frac{d^2}{T^2}}$	$A \frac{d}{T}$	$A \sqrt{\frac{d}{T}}$
	$A \frac{1}{\sqrt{3}}$	0.000	$A \frac{1}{\sqrt{3}}$

EPV241 PROGRAMMING DIAGRAM




- Increment key** Used for increasing the setpoint value and changing parameters. When held down for a few seconds, configured numeric value increases faster.
- Decrement key** Used for decreasing the setpoint value and changing parameter. When held down for a few seconds, configured numeric value decreases faster.
- Programming key** Used for displaying and configuring the selected parameter value.


ADJUSTING THE ALARM VALUE

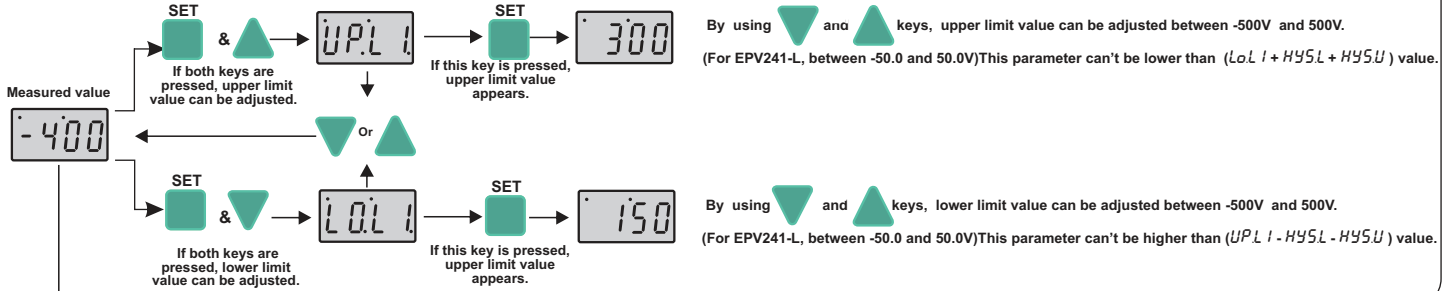

If both & keys are pressed and held for 3 seconds, programming mode is entered. If & keys are pressed while parameter names are displayed, then it returns to measured value made.

PROGRAMMING MODE

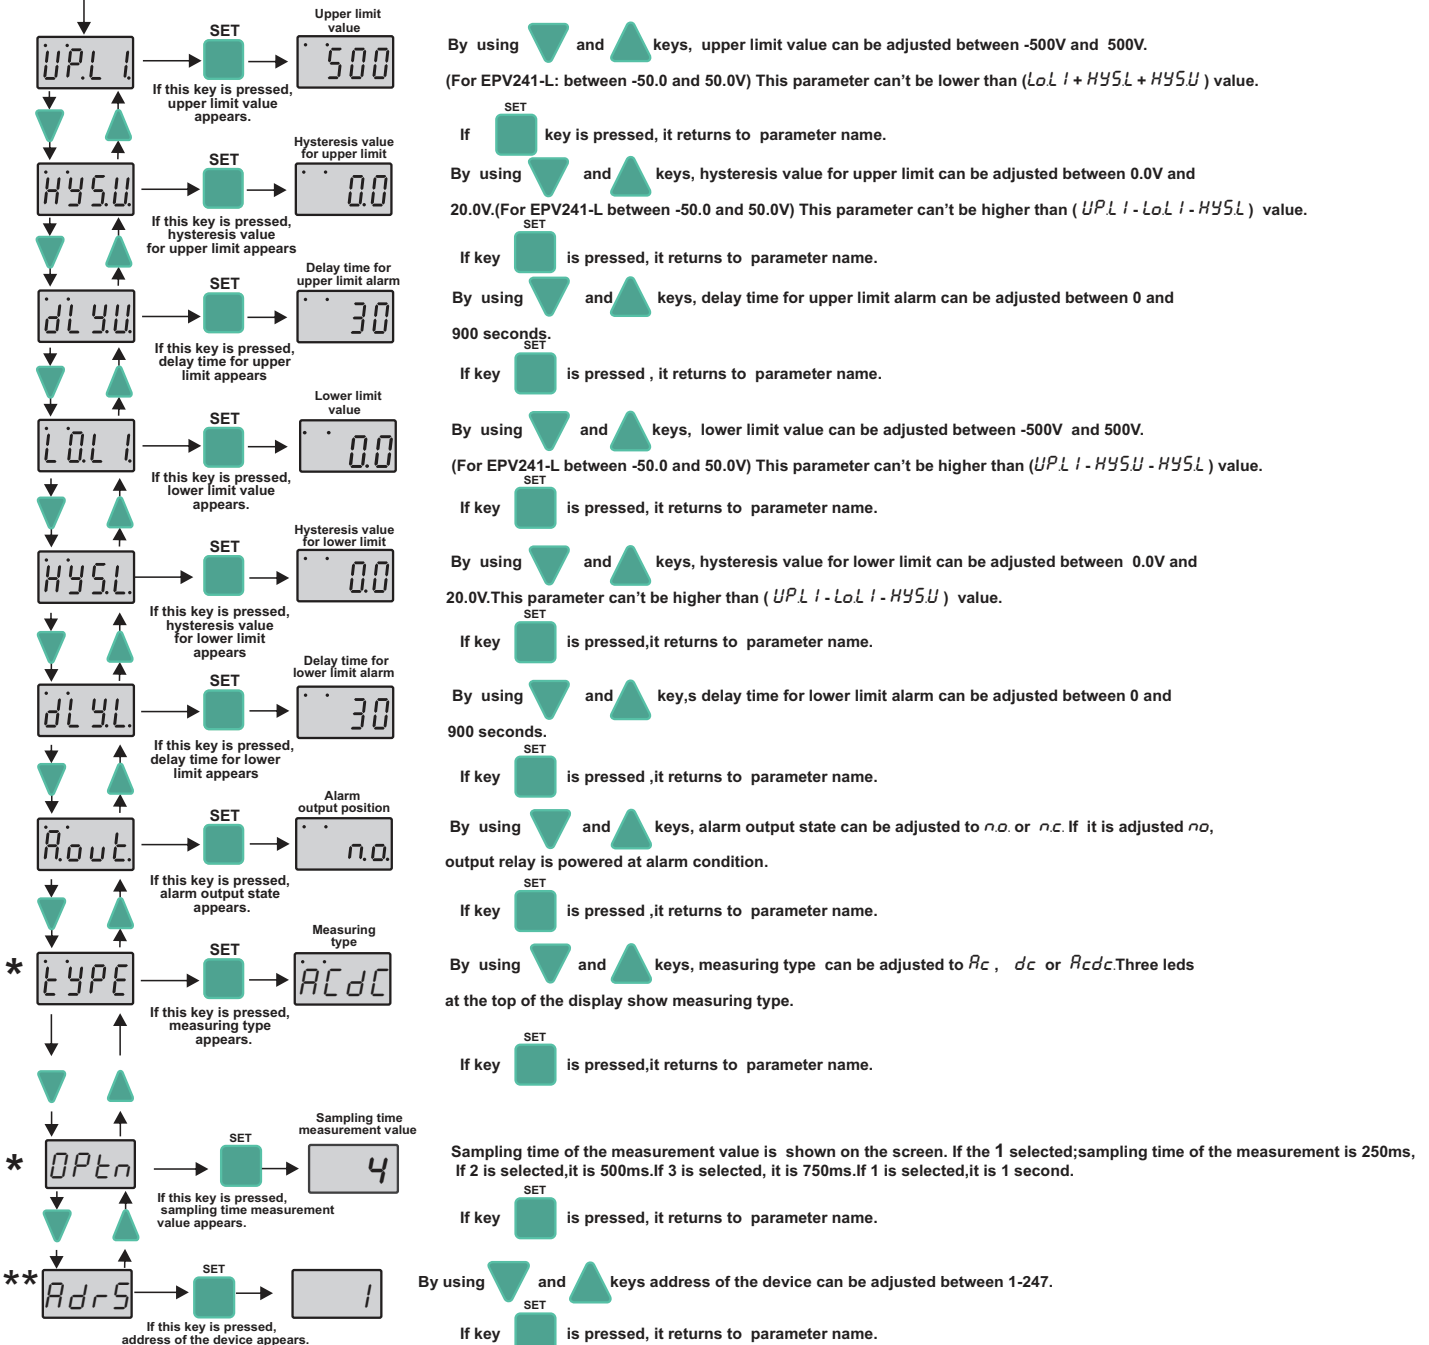



By using and keys, baudrate value of the device can be adjusted to OFF,1200,2400,4800,9600,19200.

If key is pressed, it returns to parameter name.

(*) There are only *ctrr*, *type*, *dPnt* and *oPtn* parameters in the devices those have no relay.

(**) The *Adr5* and *bAud* parameters are only in the devices those have modbus.

If any key is pressed in 25 seconds or the device is powered down and powered up, then it returns to operation mode.

NOTE: If key is held down while the device is powered up, the *dPrr* message will appear and the factory settings will be restored.

ERROR MESSAGES



Means, measured current value is higher than maximum scale.



Means, measured current value is lower than minimum scale.

ENDA EPV241 DIGITAL VOLTMETER MODBUS PROTOCOL ADDRESS MAP

1.1 HOLDING REGISTERS

Holding Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
0000d	0x0000	word	The upper limit of the setpoint	<i>uPL1</i>	Readable/Writable	500
0001d	0x0001	word	The upper limit of the hysteresis value	<i>HYSU</i>	Readable/Writable	0
0002d	0x0002	word	Delay time for the upper limit alarm	<i>dLYU</i>	Readable/Writable	30
0003d	0x0003	word	The lower limit of the setpoint	<i>LoL1</i>	Readable/Writable	0
0004d	0x0004	word	The lower limit of the hysteresis value	<i>HYSL</i>	Readable/Writable	0
0005d	0x0005	word	Delay time for the lower limit alarm	<i>dLYL</i>	Readable/Writable	30
0006d	0x0006	word	Measurement method (0=RC, 1=dC, 2=RCdC)	<i>TYPE</i>	Readable/Writable	RCdC
0007d	0x0007	word	Sampling time of the measurement value. If 1 is selected, it is 250ms. If 2 is selected, it is 500ms. If 3 is selected, it is 750ms. If 4 is selected, it is 1 second.	<i>OPtn</i>	Readable/Writable	4
0008d	0x0008	word	Device address for RS485 network connection. Adjustable between 1-247.	<i>Adr5</i>	Readable/Writable	1
0009d	0x0009	word	Baudrate (0=Off; 1=1200; 2=2400; 3=4800; 4=9600; 5=19200)	<i>bAud</i>	Readable/Writable	oFF

*Holding Register Parameter Table (No Relay Models)

0000d	0x0000	word	Measurement method (0=RC, 1=dC, 2=RCdC)	<i>TYPE</i>	Readable/Writable	RCdC
0001d	0x0001	word	Sampling time of the measurement value	<i>OPtn</i>	Readable/Writable	4
0002d	0x0002	word	Device address for RS485 network connection. Adjustable between 1-247.	<i>Adr5</i>	Readable/Writable	1
0003d	0x0003	word	Baudrate (0=Off; 1=1200; 2=2400; 3=4800; 4=9600; 5=19200)	<i>bAud</i>	Readable/Writable	oFF

1.2 INPUT REGISTERS

Input Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
0000d	0x0000	word	Measured voltage value	--	Only Readable

1.3 DISCRETE INPUTS

Discrete Input Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
00d	0x00	Bit	Relay output state (0=OFF; 1=ON)	--	Only Readable

1.4 COILS

Coil Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
00d	0x00	Bit	Alarm output state (0=no; 1=nc)	<i>RoUt</i>	Readable/Writable	no

*Coil and Discrete input parameters are not available in the devices those have no relay